


1. View Live Programs

- Select Channel by pressing up/down button on the remote control, then press OK
- Press OK once more to make it full screen
- To Change the channel, press Menu button on the remote control to show Channel List on the screen. Please select a channel and press OK. (You can change channels by pressing up/down button without showing Channel List too.)
- To go back to menu screen, please press Return button on the remote control.

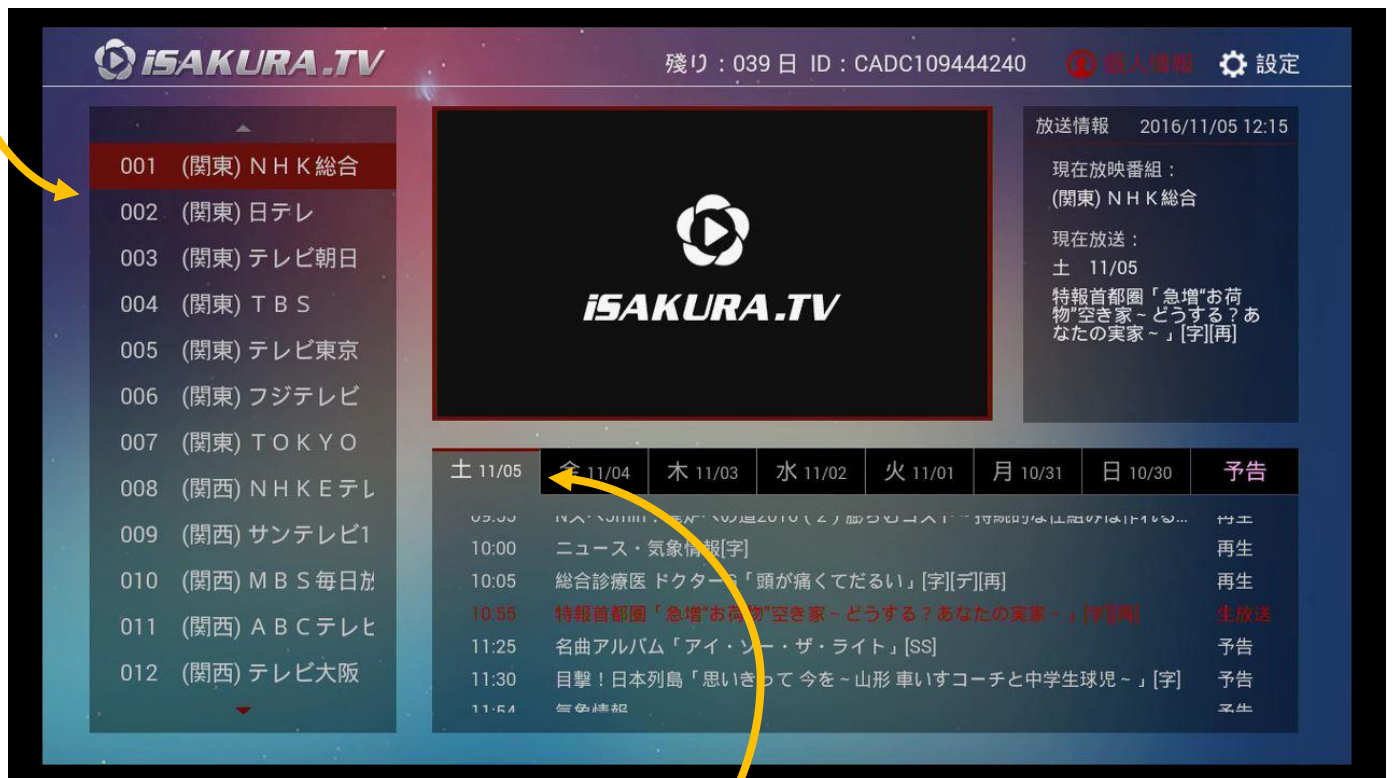

2. View Replay Programs

- Select a Channel and OK, select a day and OK then select time & program name and OK.
- Press OK once more to make it full screen
- You can Rewind/Fast Forward by pressing Left/Right button near the OK button. 1 press makes 15 seconds of RW/FF. To move faster, please keep pressing Left or Right button.
- While on Full Screen mode, you can show Program List by pressing Menu Button on the remote control to select a program on the same channel on the same day.
- To change the day or channel, please go back to menu screen by pressing Return button on the remote control.

3. Basic Function of Remote Control

